



# 9000 Table Base Assembly Instructions

## Parts List


- (1) Rod
- (1) Nut
- (1) Spider
- (1) Column
- (1) Base

## Tools List

- 7/16" Socket Wrench



1.

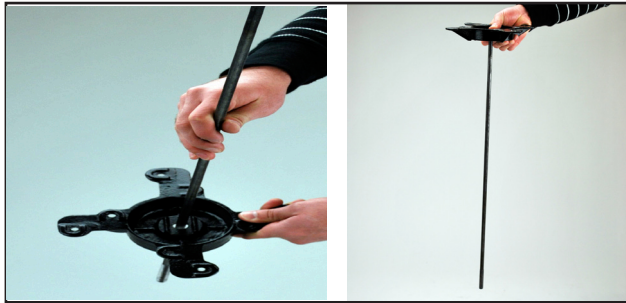


Slide rod through top of spider

2.



Flip spider and rod upside down, threaded end of rod should face up.

3.

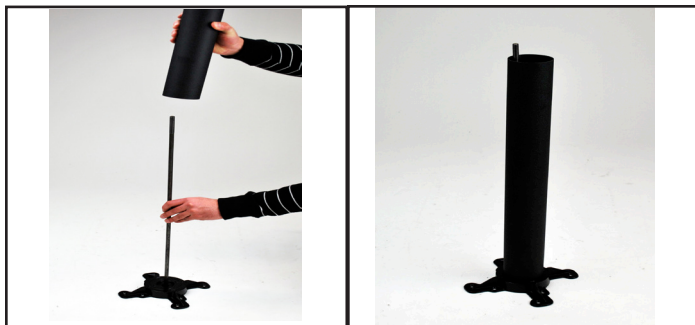

Place column over rod

4.



Flip base upside down and guide rod through base's center hole



**4.**



Step 4 Continued

**5.**



Connect base to column by tightening nut. Flip over for finished product

